### Kata 2


### Crear un entorno virtual

D:\LaunchX\python>pthon3 -m venv env
No se encontr% Python; ejecuta sin argumentos para instalar desde Microsoft Store o deshabilita este acceso directo en Configuraci%n > Adm inistrar alias de ejecuci%n de la aplicaci%n.

D:\LaunchX\python>pthon -m venv env

D:\LaunchX\python>[

## Archivos que se crean

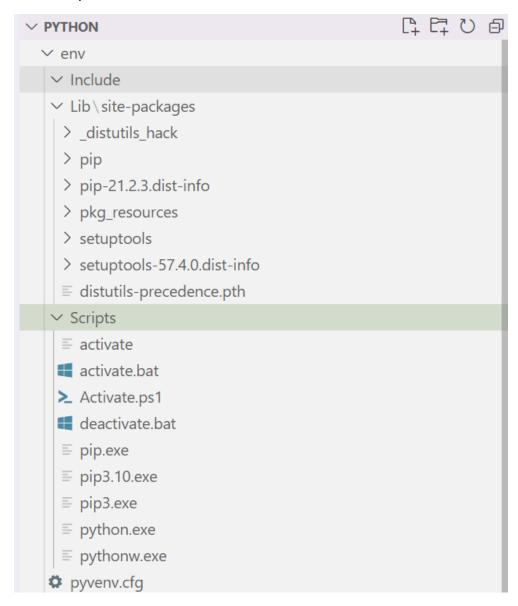

Activación del Entorno virtual

```
D:\LaunchX\python>env\bin\activate
El sistema no puede encontrar la ruta especificada.

D:\LaunchX\python>env\Sripts\activate
El sistema no puede encontrar la ruta especificada.

D:\LaunchX\python>env\Scripts\activate

(env) D:\LaunchX\python>[]
```

# Instalando paquete con pip

```
(env) D:\LaunchX\python>pip install python-dateutil
Collecting python-dateutil
    Using cached python_dateutil-2.8.2-py2.py3-none-any.whl (247 kB)
Collecting six>=1.5
    Using cached six-1.16.0-py2.py3-none-any.whl (11 kB)
Installing collected packages: six, python-dateutil
Successfully installed python-dateutil-2.8.2 six-1.16.0
WARNING: You are using pip version 21.2.3; however, version 22.0.3 is available.
You should consider upgrading via the 'D:\LaunchX\python\env\Scripts\python.exe -m pip install --upgrade pip' command.

(env) D:\LaunchX\python>[]
```

## Salir del entorno (desactivarlo)

Deactivate

## Ejercicio

```
D:\LaunchX\python\EntornoV>python -m venv env
D:\LaunchX\python\EntornoV>env\Scripts\activate
(env) D:\LaunchX\python\EntornoV>pip freeze
(env) D:\LaunchX\python\EntornoV>pip install python-dateutil
Collecting python-dateutil
 Using cached python_dateutil-2.8.2-py2.py3-none-any.whl (247 kB)
Collecting six>=1.5
 Using cached six-1.16.0-py2.py3-none-any.whl (11 kB)
Installing collected packages: six, python-dateutil
Successfully installed python-dateutil-2.8.2 six-1.16.0
WARNING: You are using pip version 21.2.3; however, version 22.0.3 is available.
You should consider upgrading via the 'D:\LaunchX\python\EntornoV\env\Scripts\python.exe -m pip install --upgrade pip' c
(env) D:\LaunchX\python\EntornoV>pip freeze
python-dateutil==2.8.2
six==1.16.0
(env) D:\LaunchX\python\EntornoV>deactivate
D:\LaunchX\python\EntornoV>
```